





Front view



Rear view

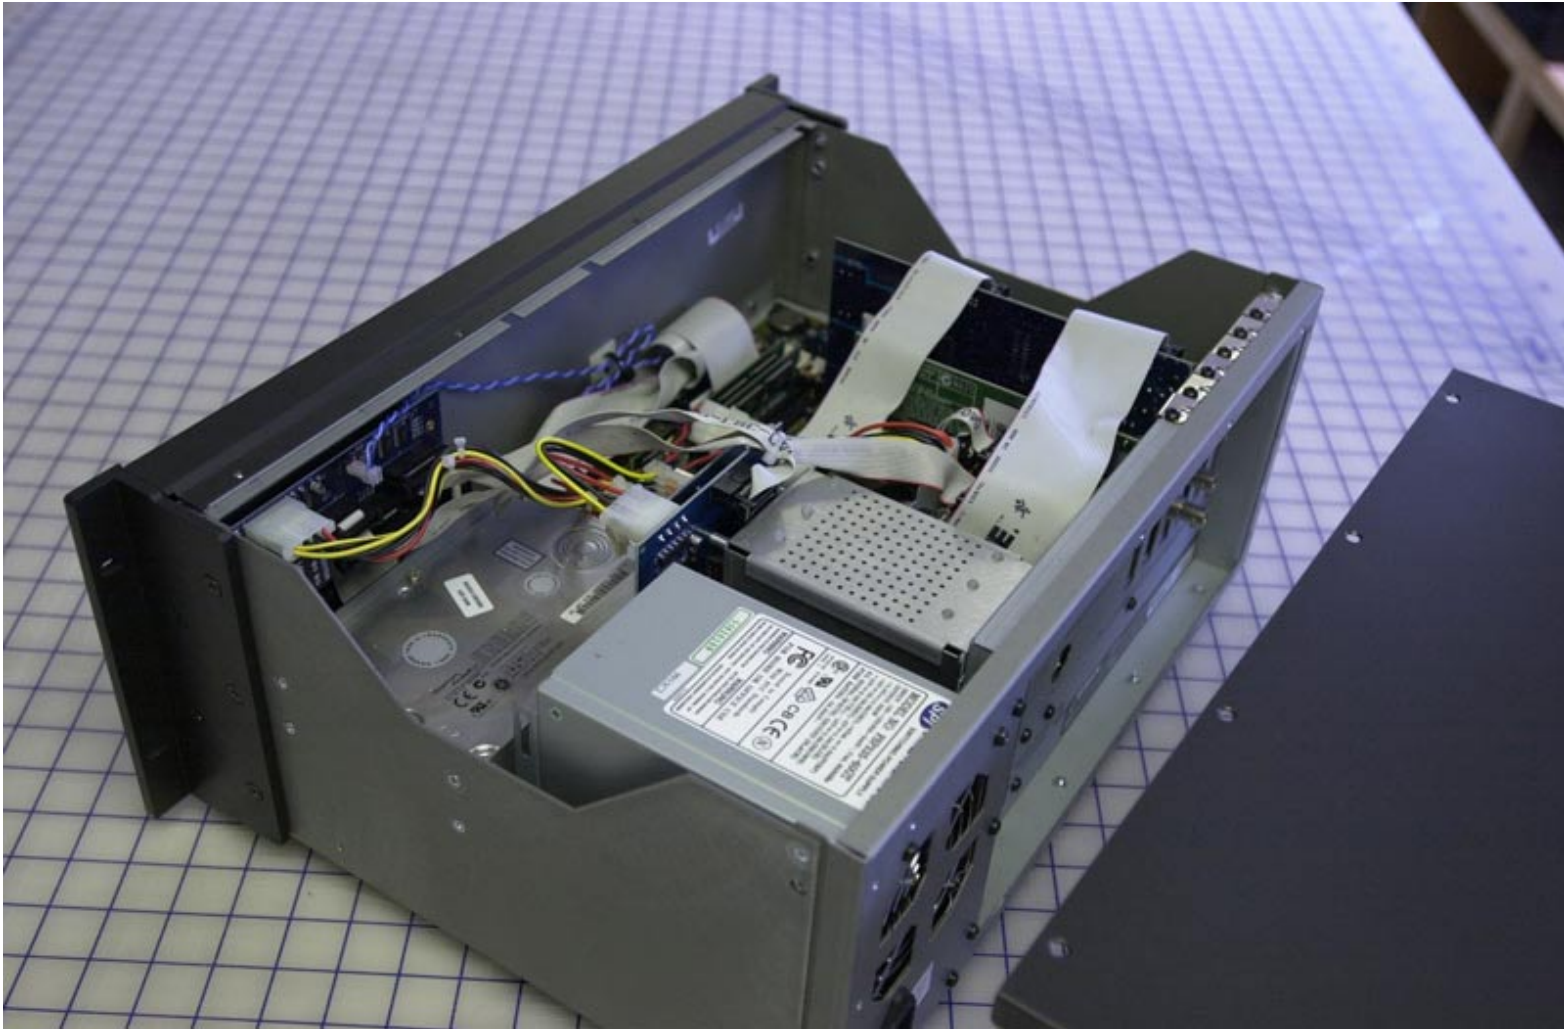

Cover removed

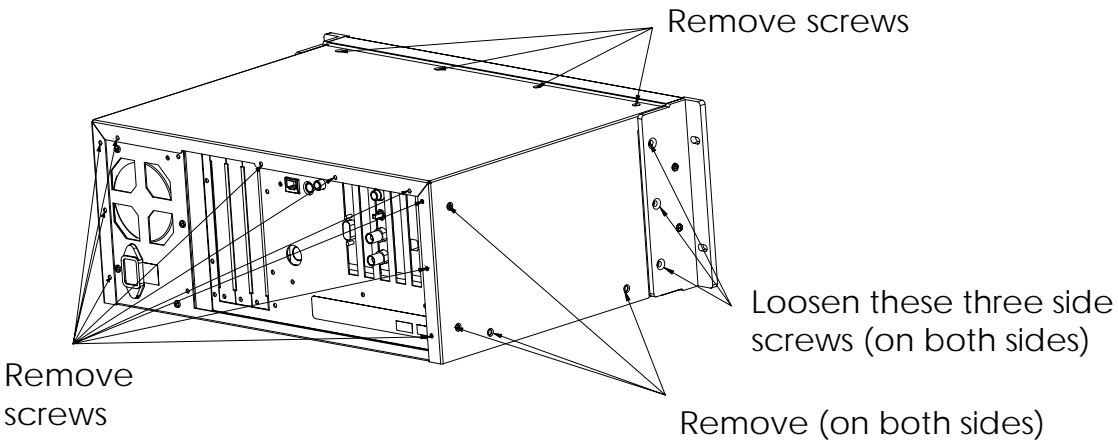


Cover removal




Brain Board

Internal Hard Drive

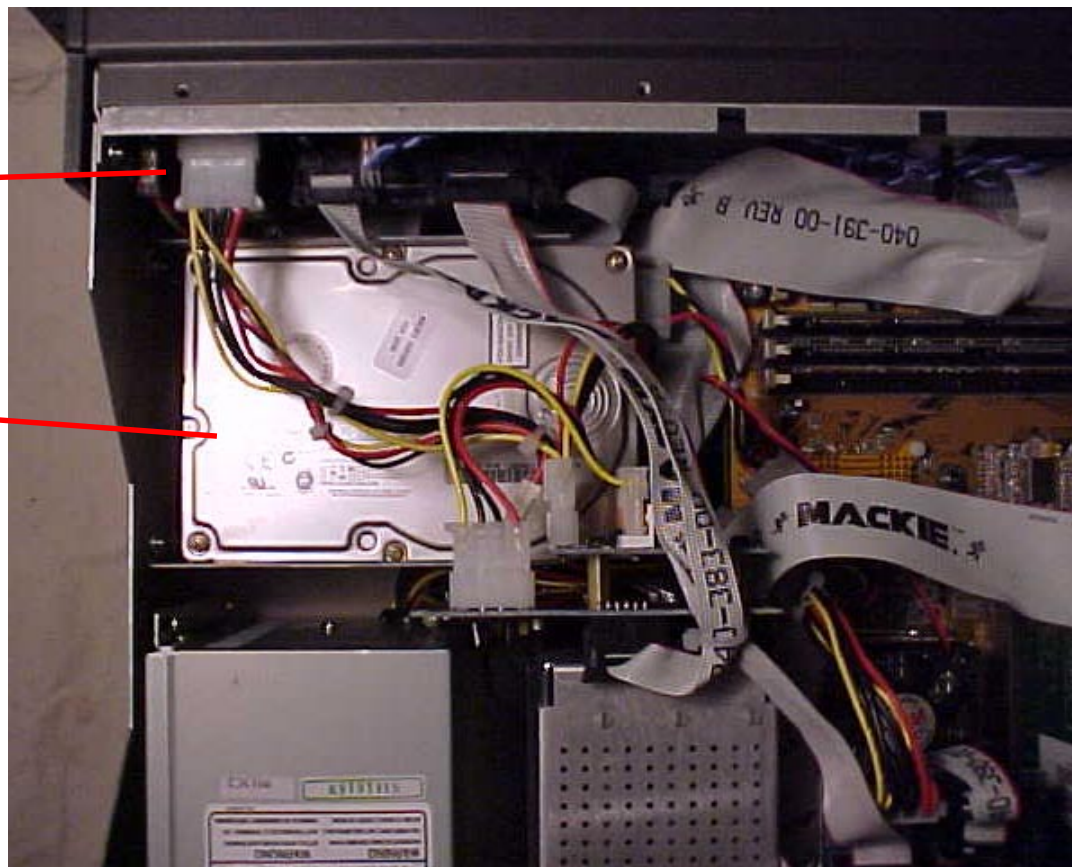

Top left view

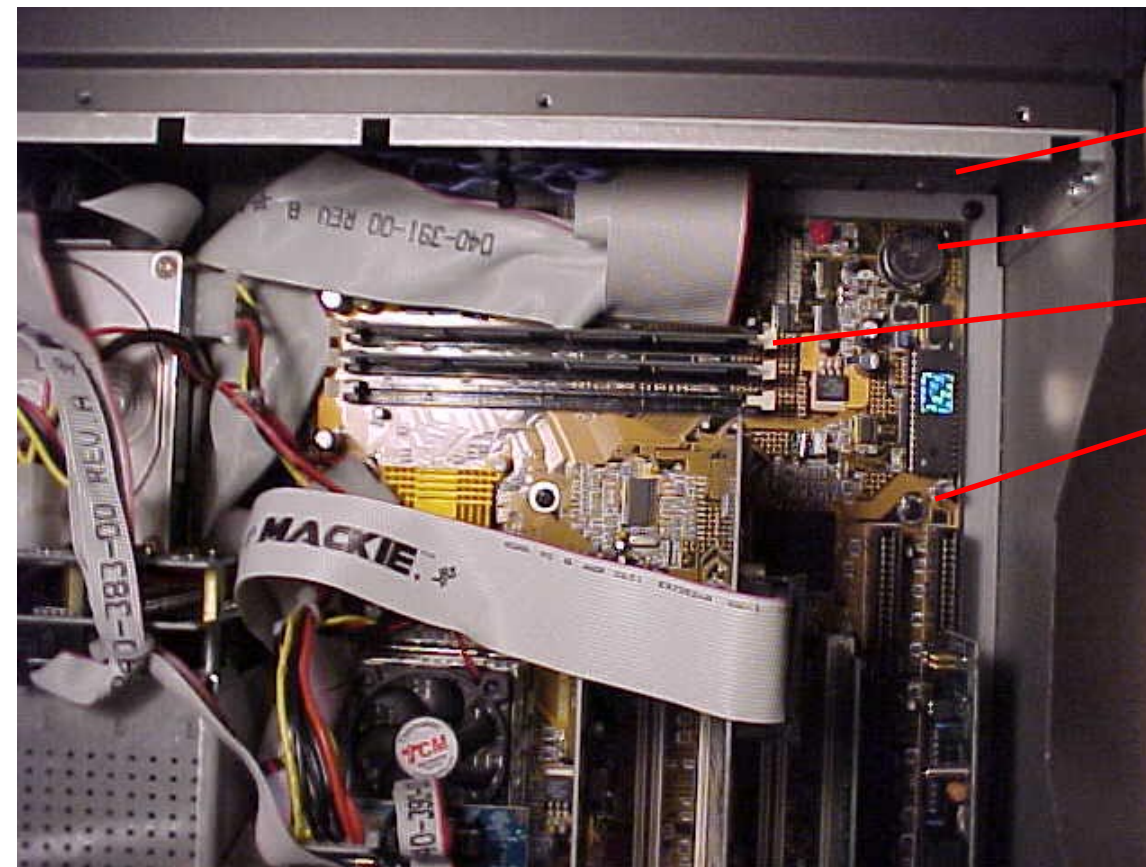


Top right view

Post stamp Board


Backplane Board

Card Cage

Power Supply

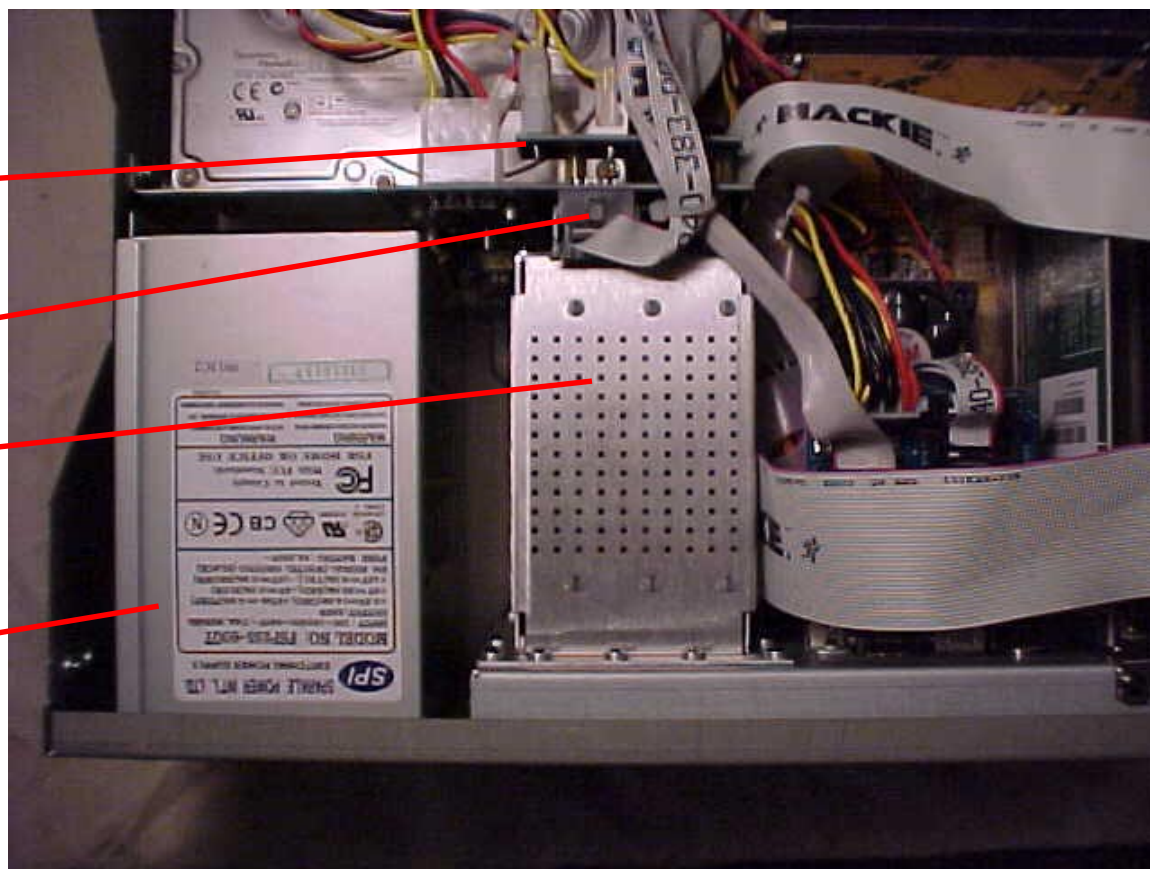

Bottom left view

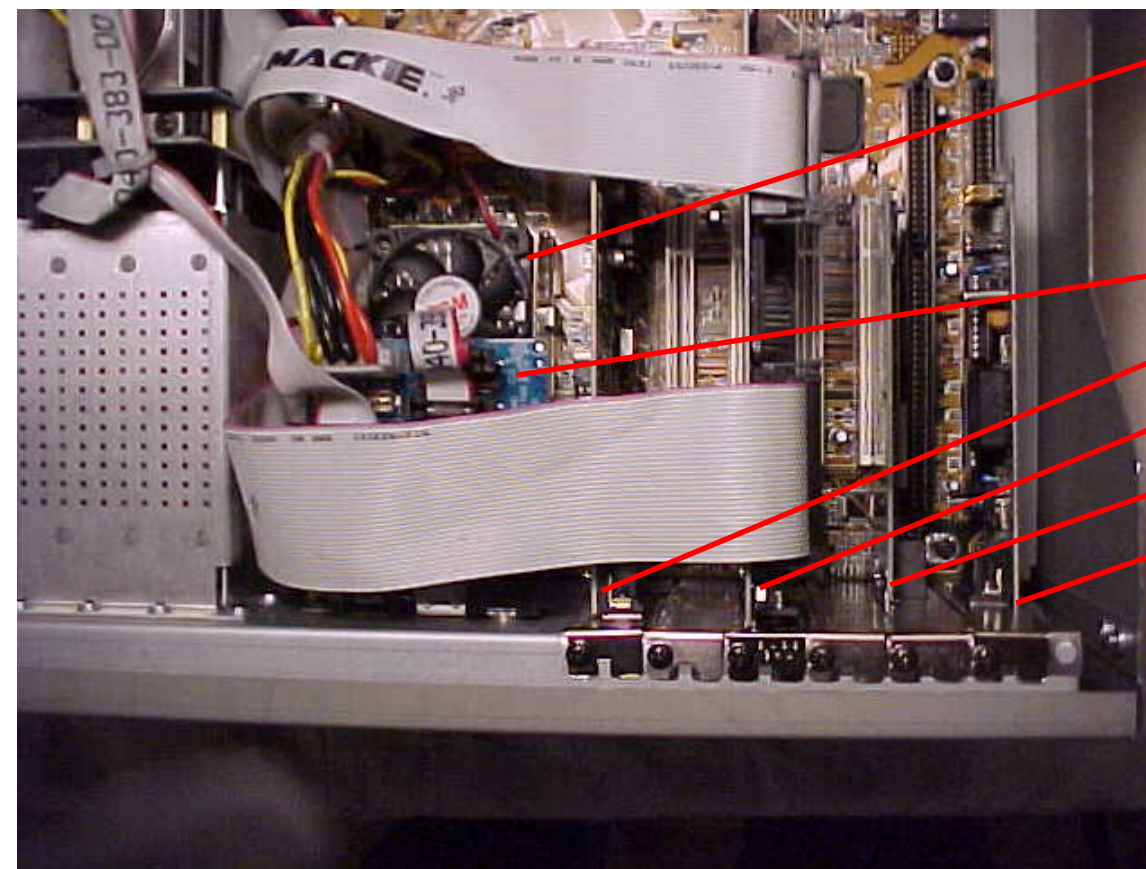

Bottom right view

Front Panel Board

Backup Battery

Memory Modules

Motherboard

Fan and  
Microprocessor

Remote Board

Video Card




Sync Card

Ethernet Card

MIDI Card




Note: This shows an earlier model with two 64Mb memory modules. Later models have a single 128Mb memory. There is no need to up-grade if your model has two 64MB.

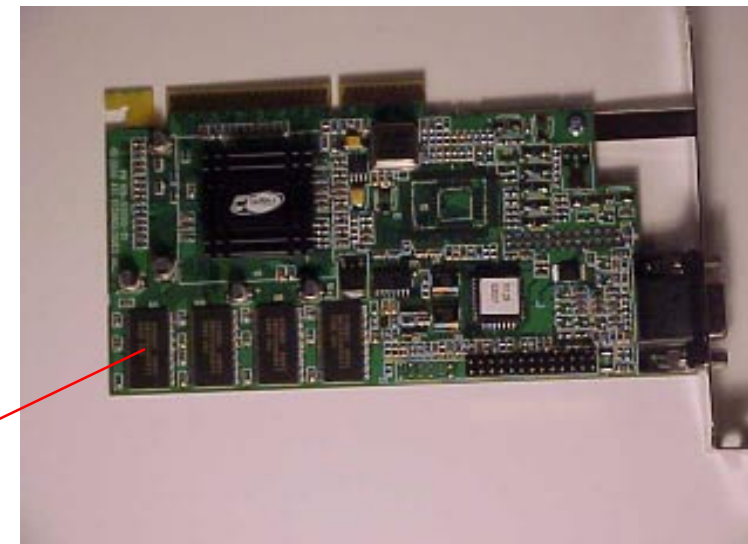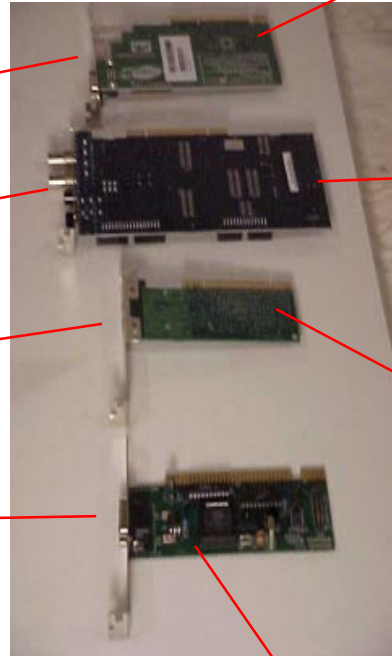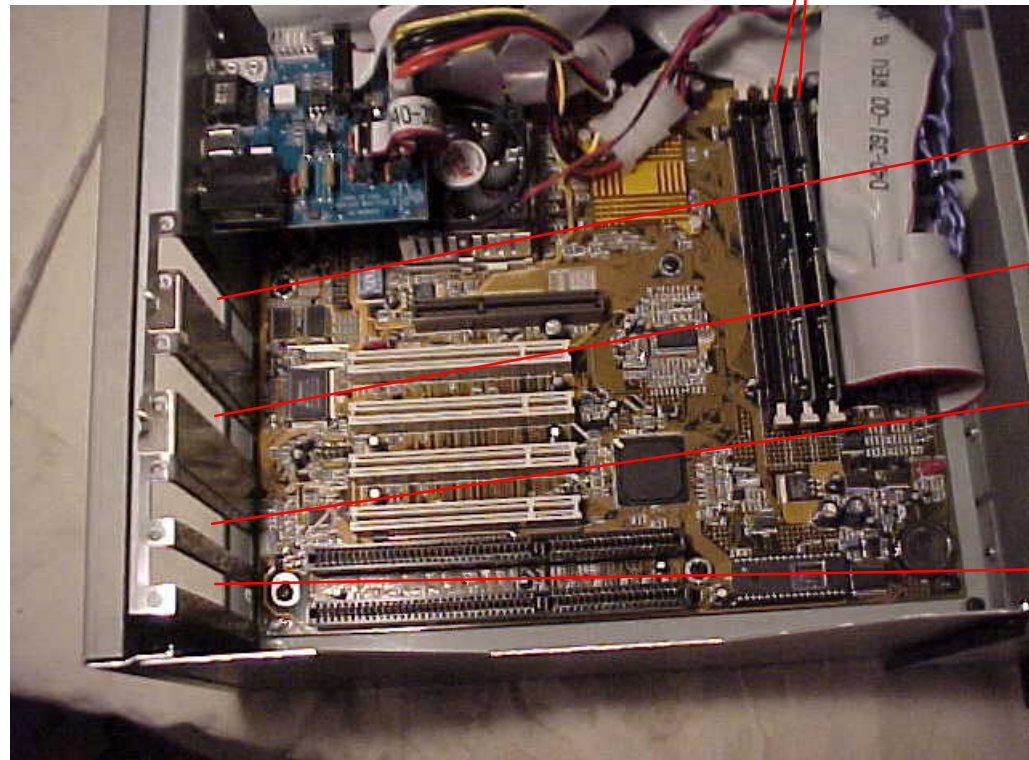


Video Card



Acuma Card

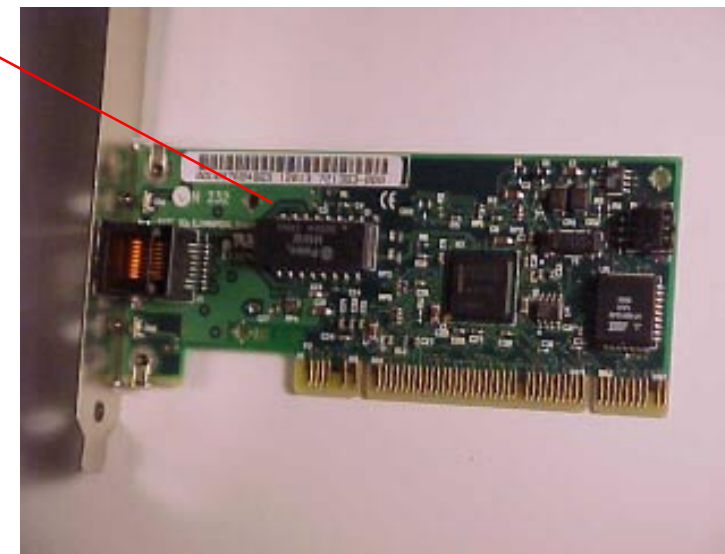


Ethernet Card


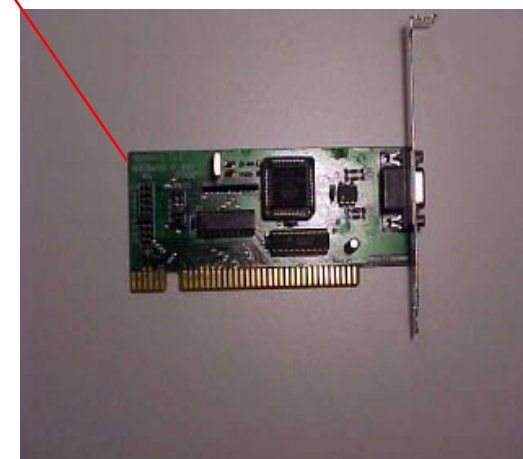


MIDI Card



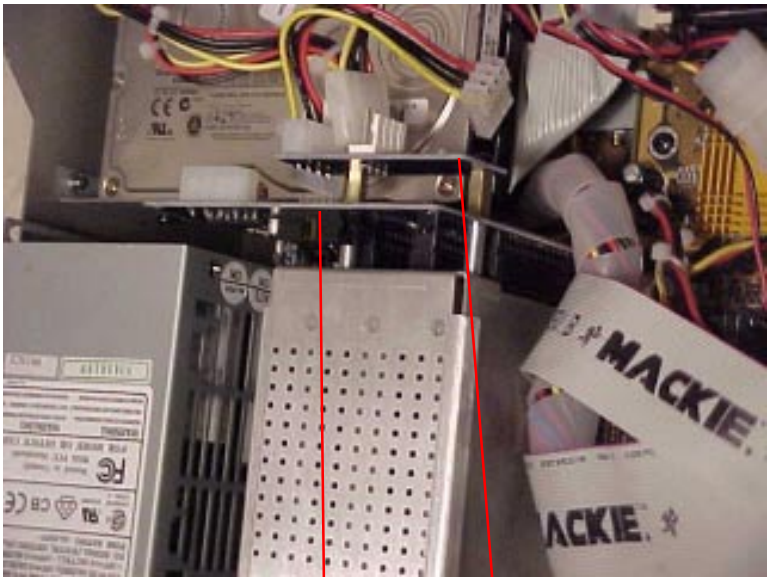


View of backplane and piggy-back board

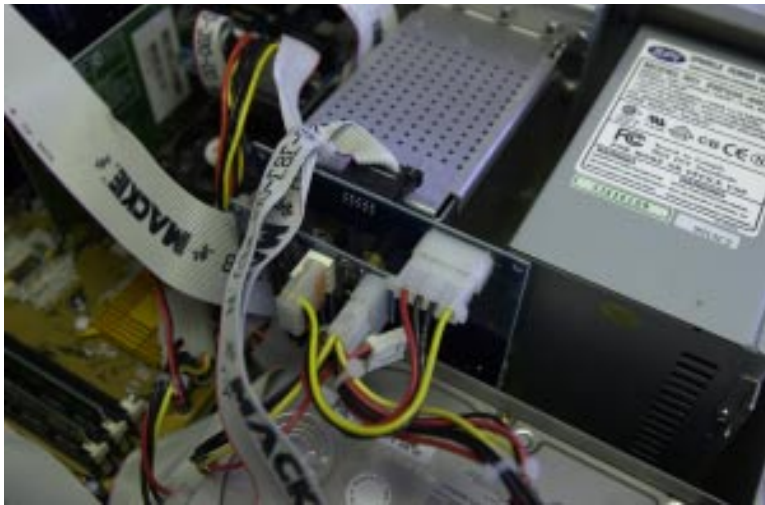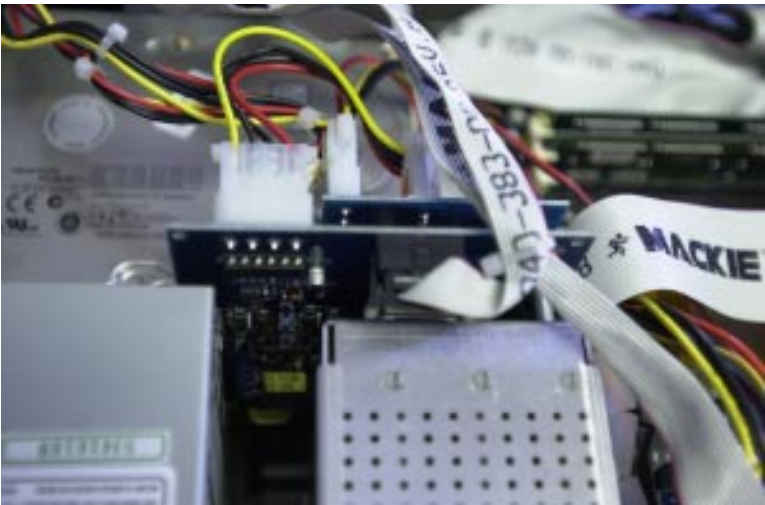

Card Cage Assembly removed



Card Cage

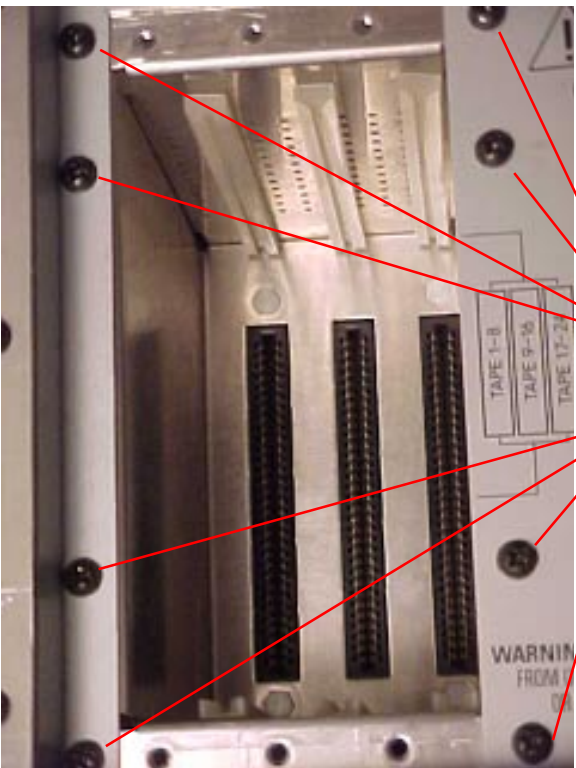


Remove eight screws to remove card cage








Remote Board removed

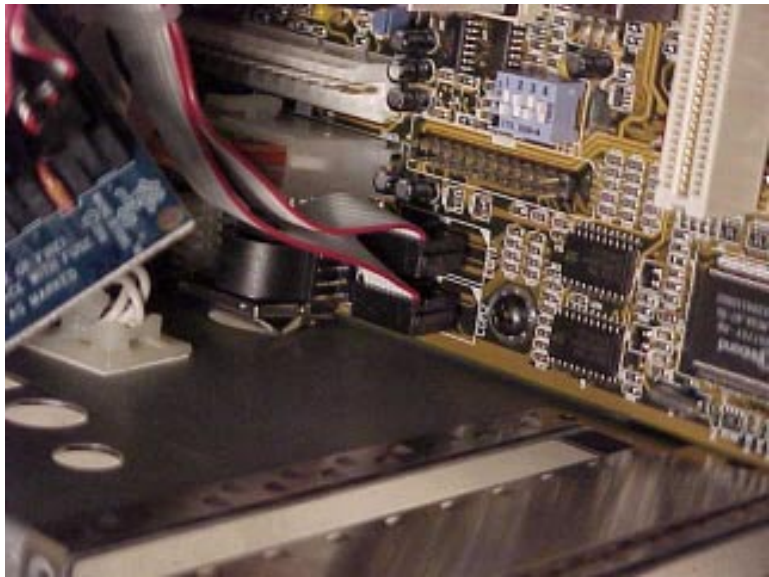

Remove screw and nut  
to remove the remote board

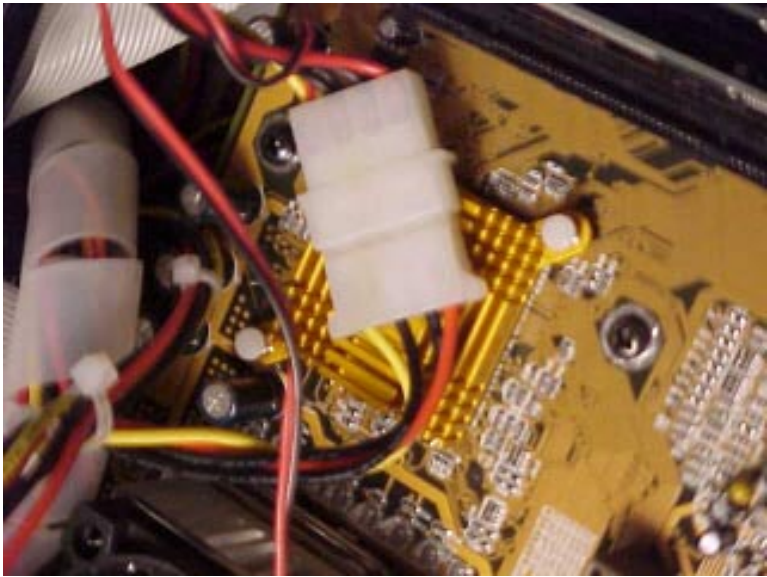




Internal Hard Drive



Hard Drive Removed

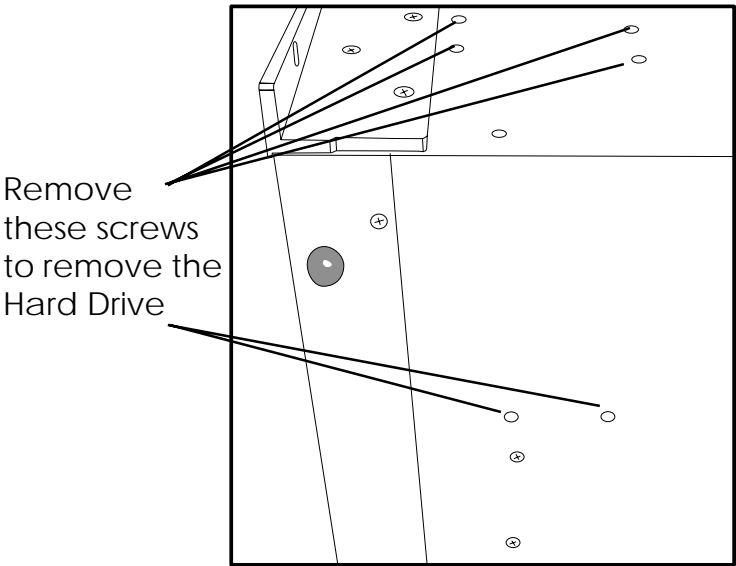


Brain Board



Brain Board view with  
Hard Drive removed




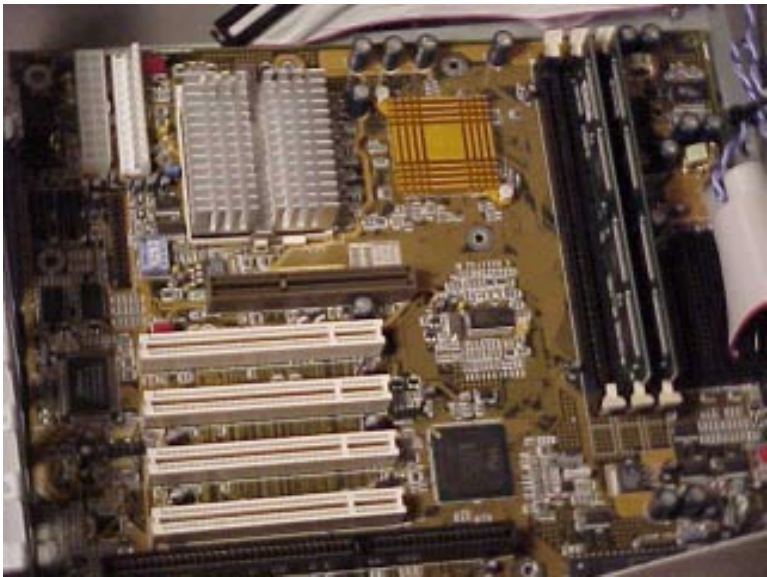

Motherboard with most parts removed




Plate removed, showing the external hard drive and the floppy drive

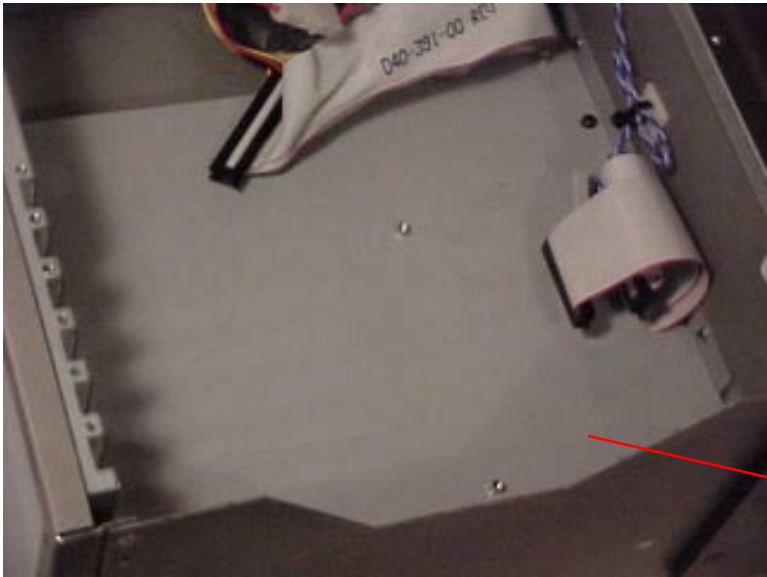


Metal support Plate below the Motherboard

Remove screws to remove plate

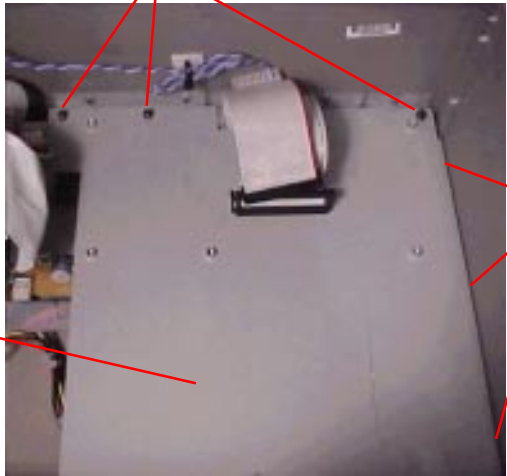


3 side screws

Remove screws

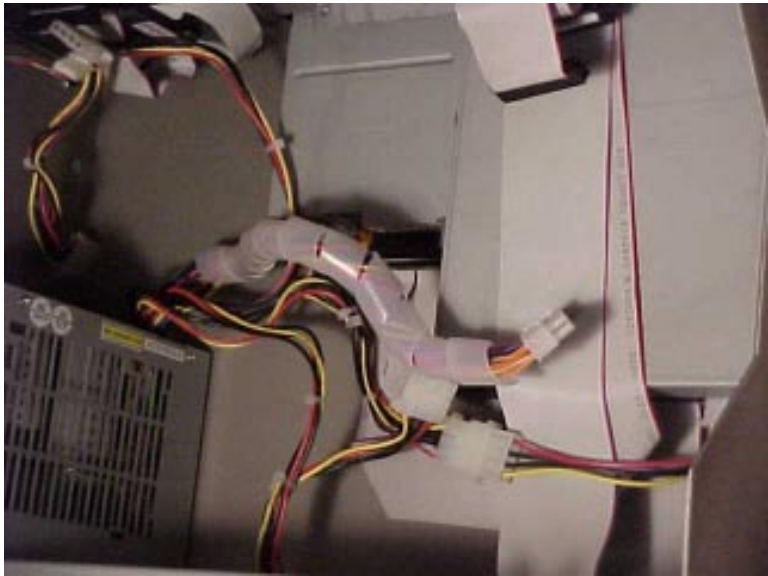



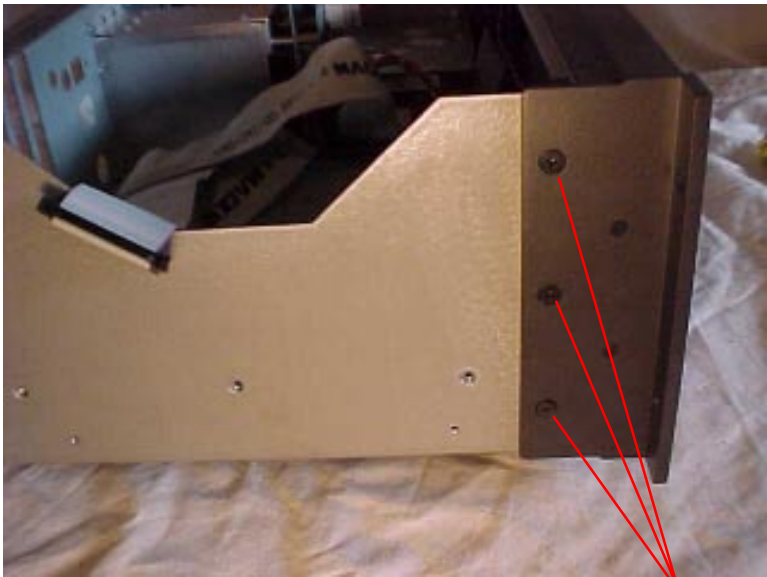

Side View To remove the front panel, remove these three screws on each side and three bright screws along the bottom edge.



Power Switch Detail





Front Panel




Three smaller screws


Three brass standoffs

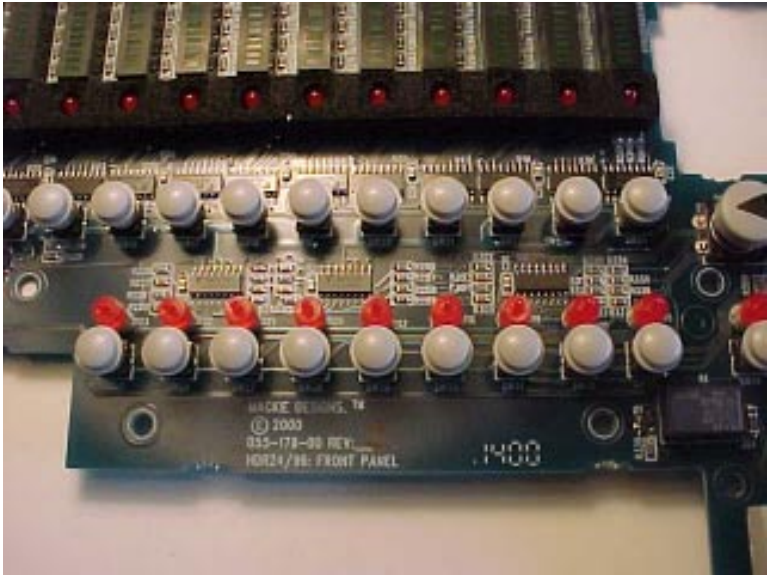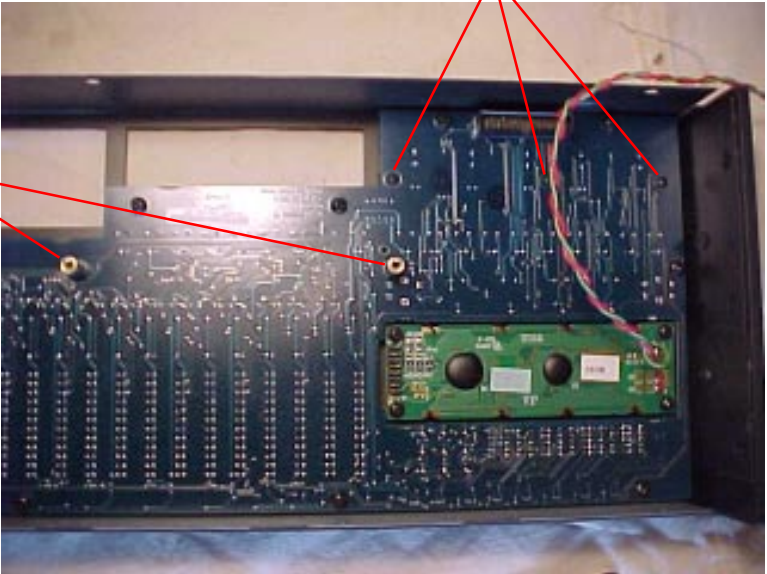

Front panel detail

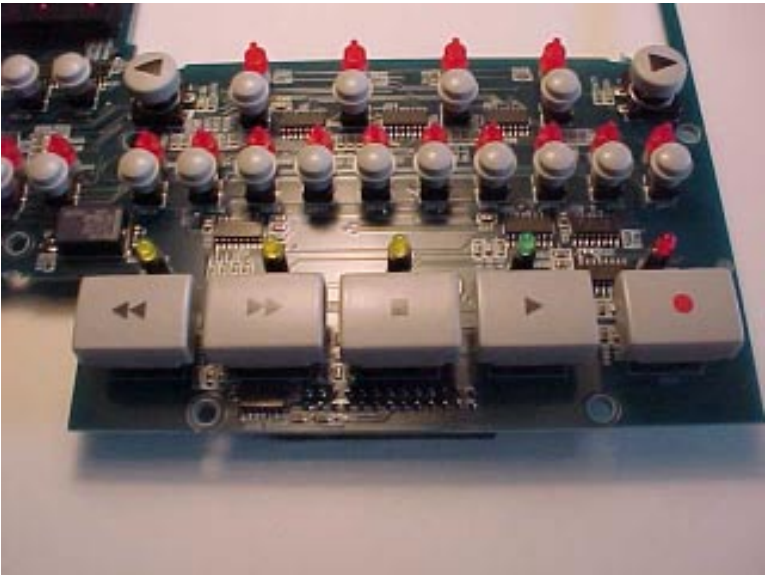

Transport buttons

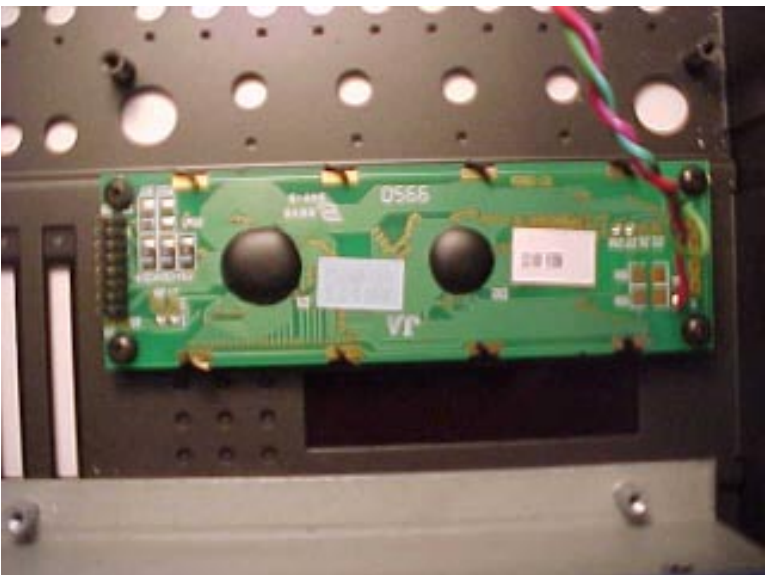


Rear View of VFD in place



Front view of VFD




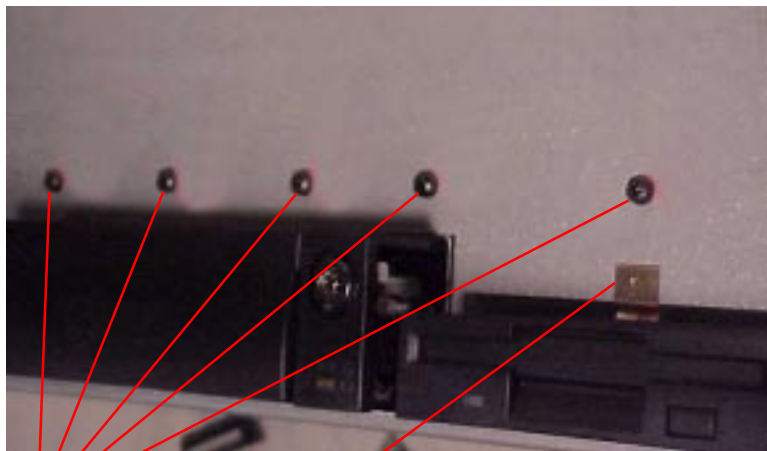


Screws EMI gasket Front view of external hard drive and floppy drive



Note the grommet around the metal cut-out

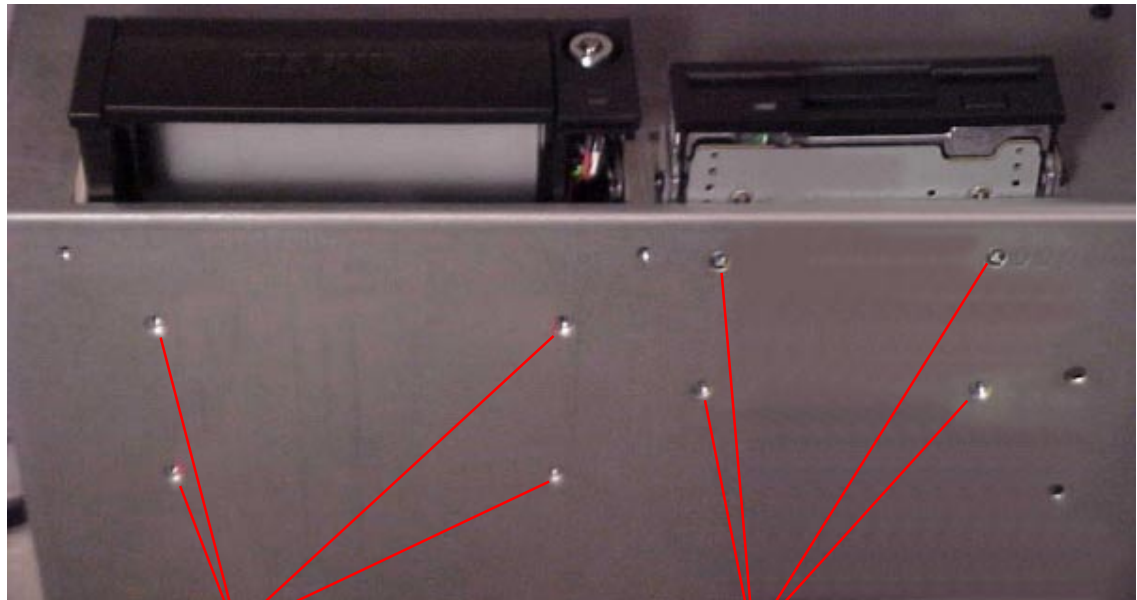

Note that the drives also have screws on the bottom panel

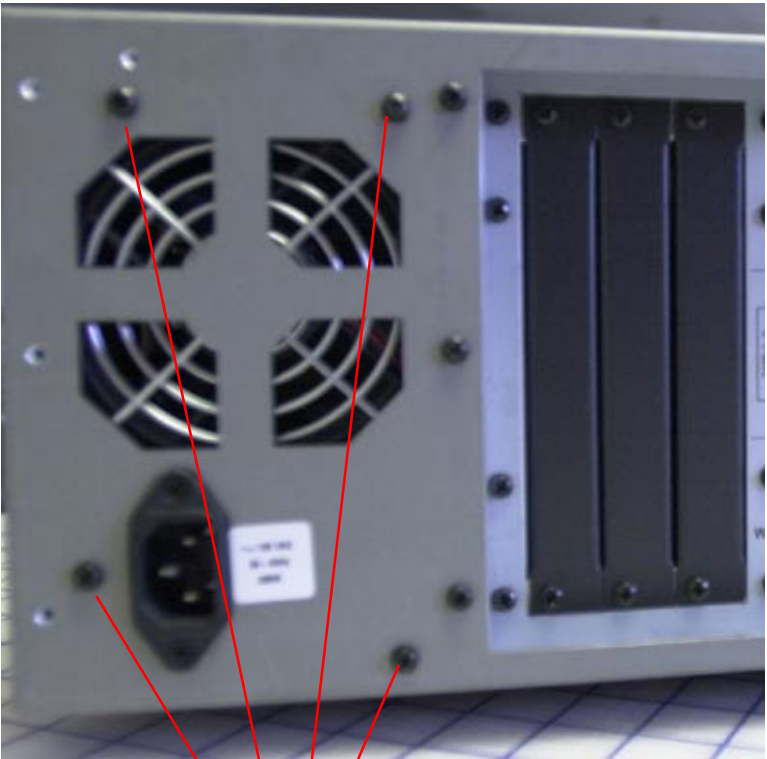

Remove these screws to remove the power supply assembly