

The circled numbers are the item numbers shown in the left column of the Parts list chapter on pages A10 and A11.

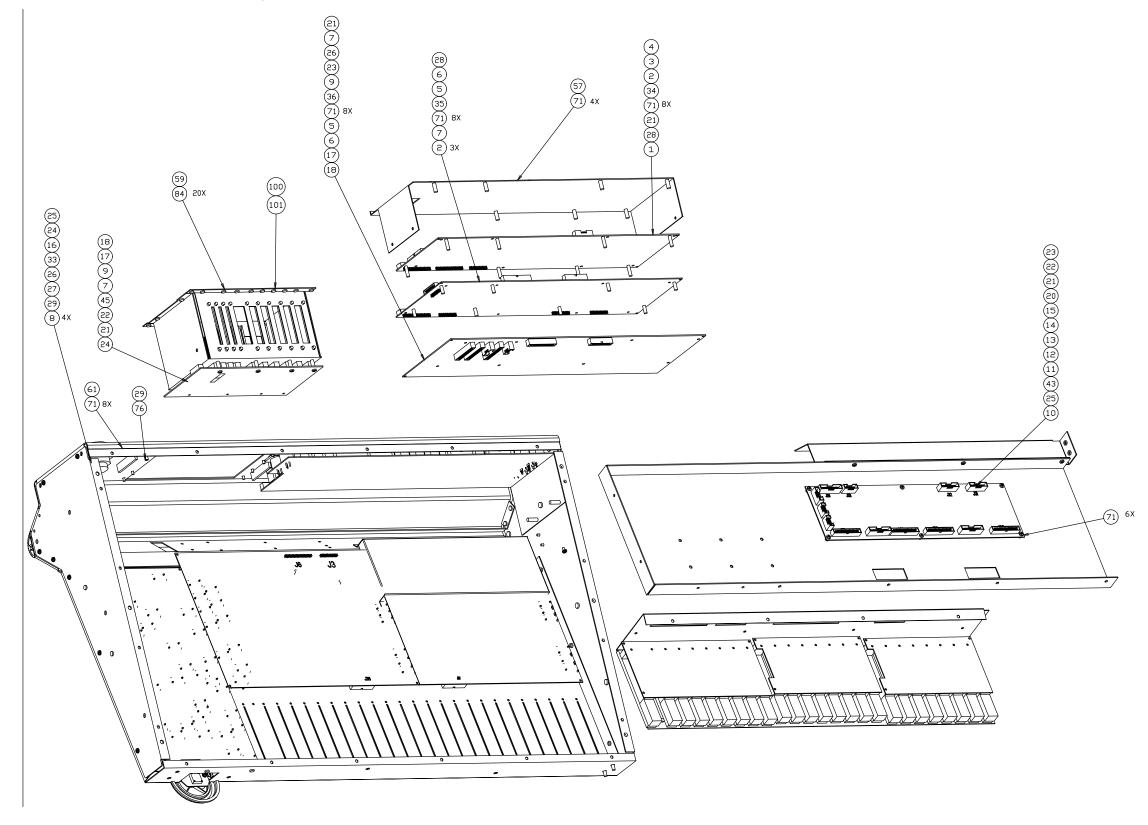

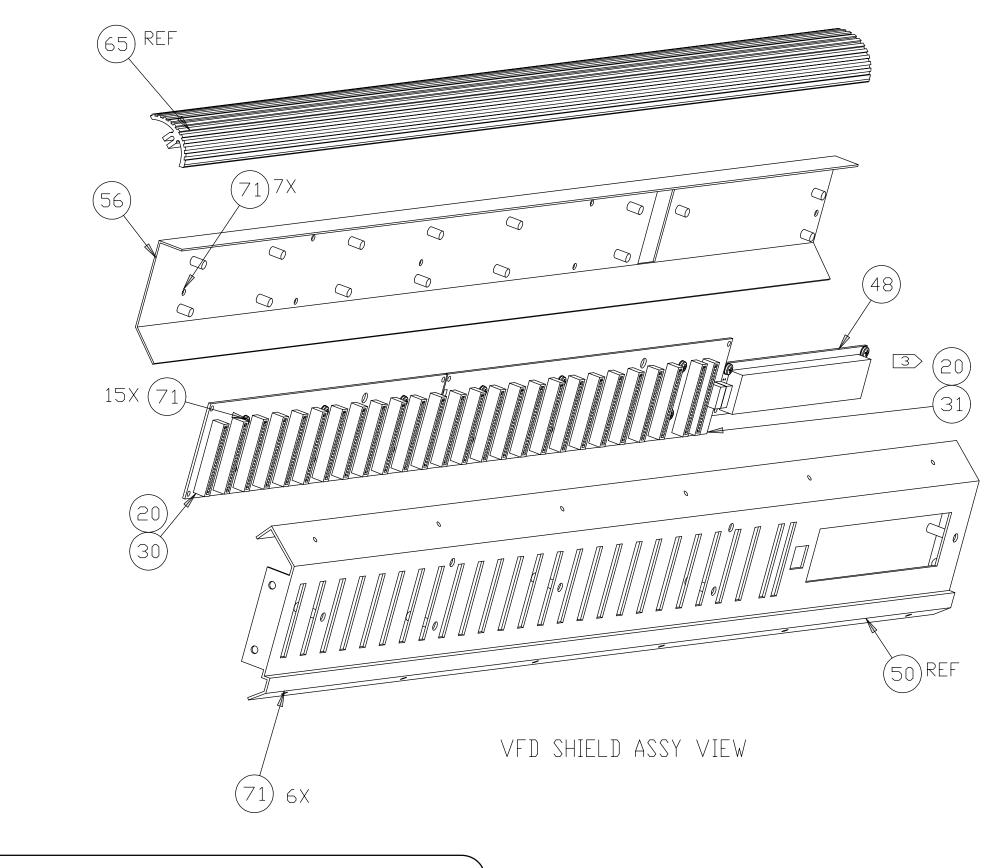



MAGKE 68b SERVICE MANUAL




CONSOLE ASSEMBLY DRAWINGS

E-2

The circled numbers are the item numbers shown in the left column of the Parts list chapter on pages A10 and A11.

©1998, ©1999 Mackie Designs Inc. All rights reserved

The circled numbers are the item numbers shown in the left column of the Parts list chapter on pages A10 and A11.

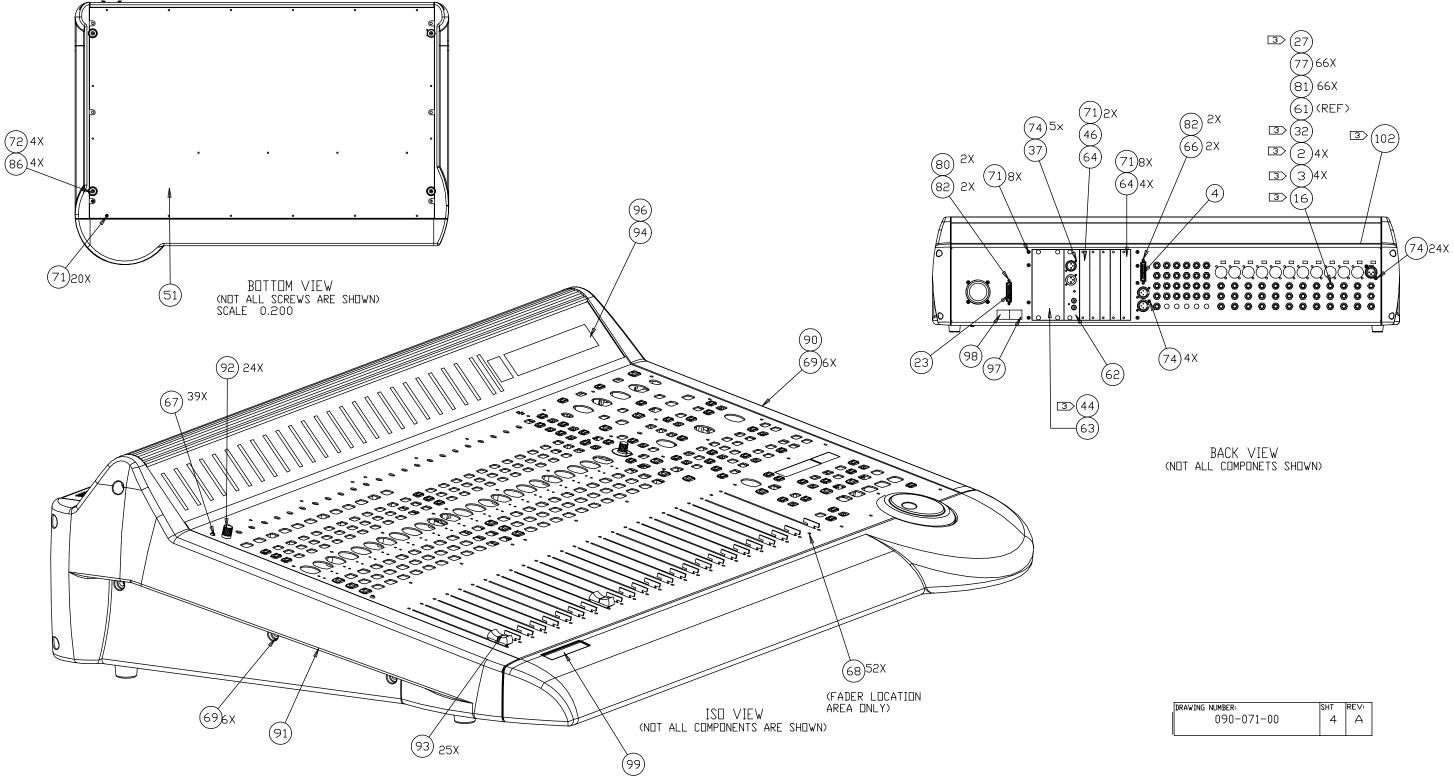

©1998, ©1999 Mackie Designs Inc. All rights reserved

CONSOLE ASSEMBLY DRAWINGS


| \mathbf{F}_{-} | 3 |
|------------------|---------------|
| | \mathcal{I} |

| DRAWING NUMBER: | SHT | REV⊨ |
|-----------------|-----|------|
| 090-071-00 | 4 | Α |
| | | |



MAGKE 68b SERVICE MANUAL


E-4

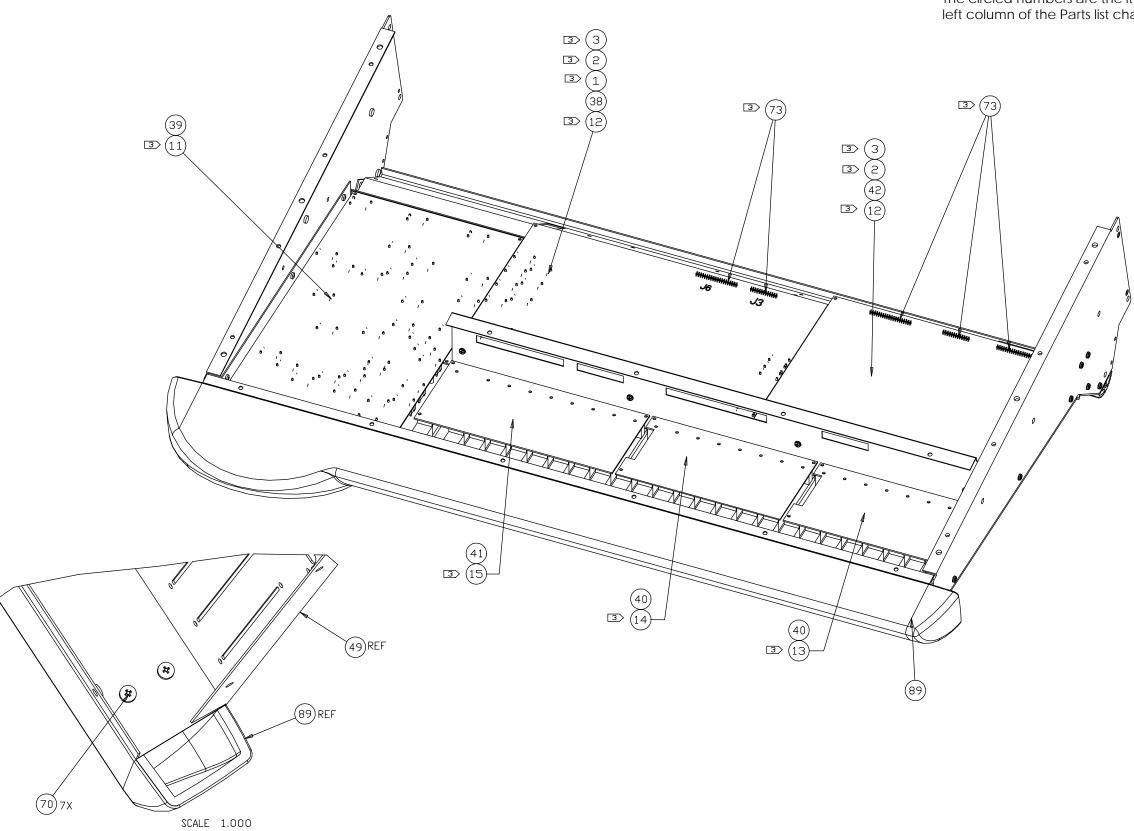

The circled numbers are the item numbers shown in the left column of the Parts list chapter on pages A10 and A11.

©1998, ©1999 Mackie Designs Inc. All rights reserved


MAGKE 68b SERVICE MANUAL

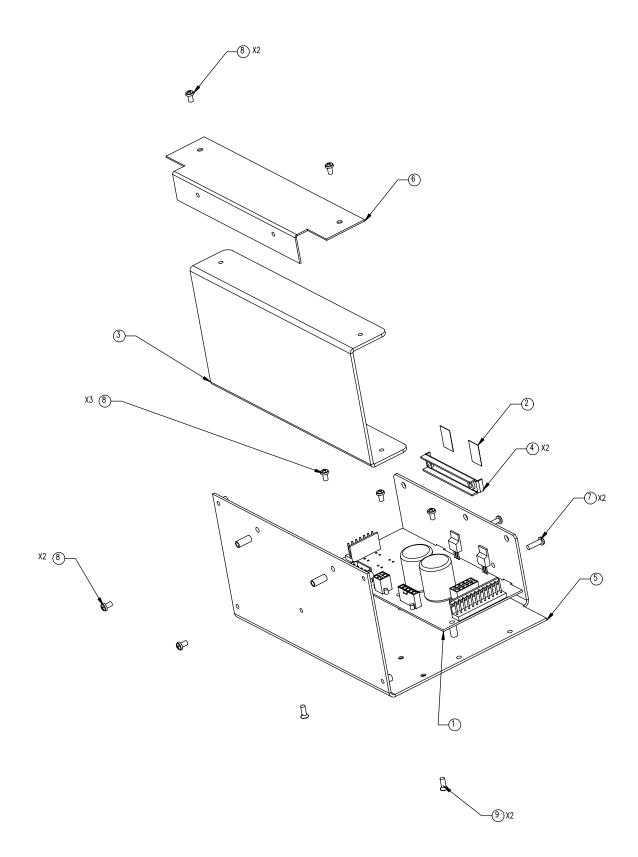

REMOTE CPU ASSEMBLY DRAWINGS

E-5

The circled numbers are the item numbers shown in the left column of the Parts list chapter on pages A12 and A13.

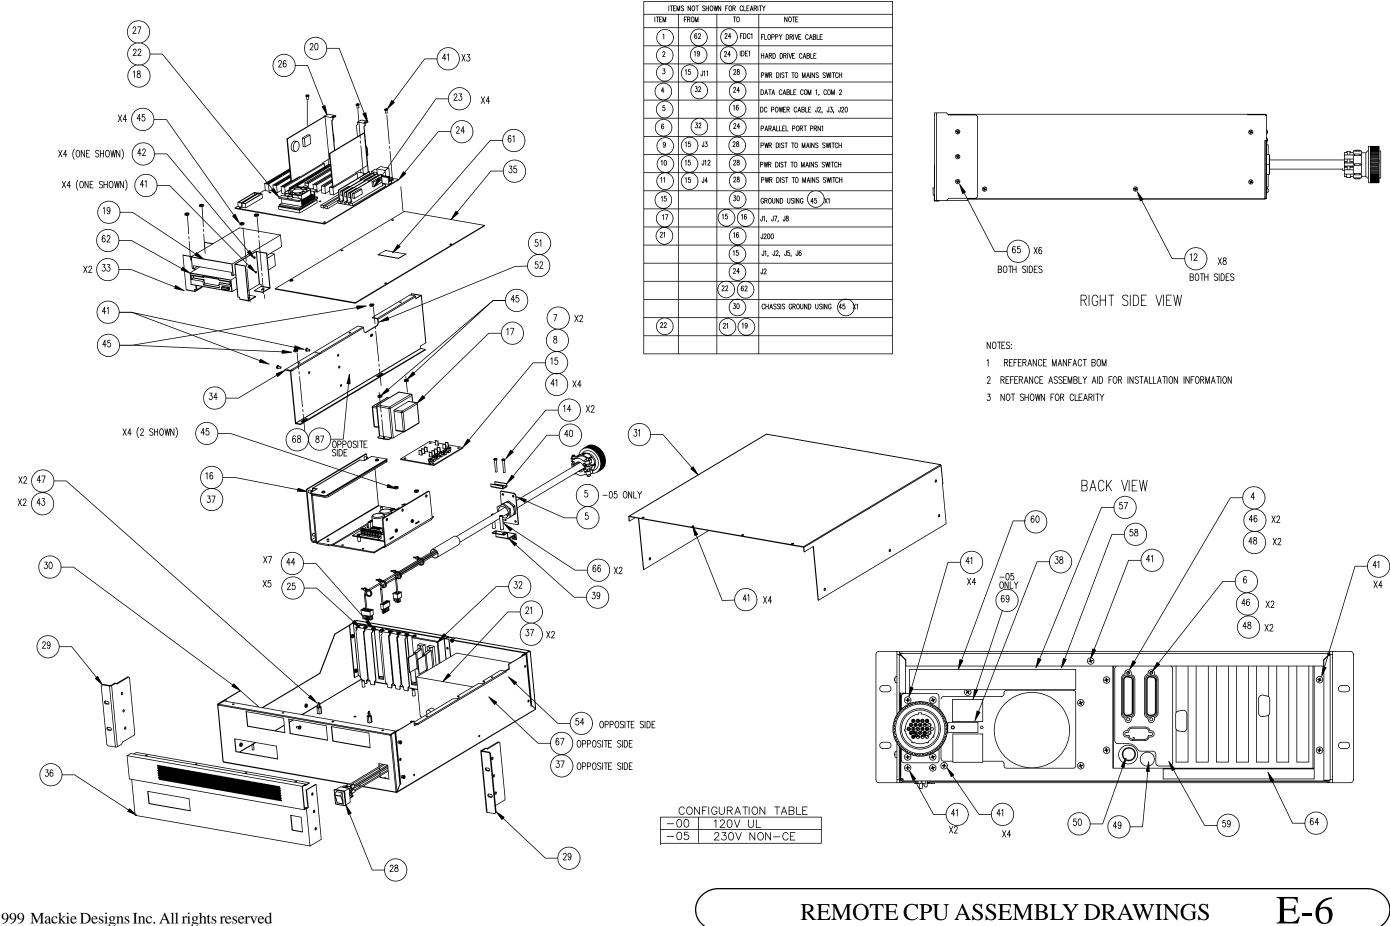

d8b service manual MAGEKIE.

REMOTE CPU ASSEMBLY DRAWINGS